

INSTALLATION INSTRUCTIONS FOR BATHROOM SHELVES

LM 590, 591, 592



Contents of the package:

- 1 pcs LM 598 plastic bracket and bathroom shelf
- 2 pcs countersunk screws 4.0 x 25 mm (black)
- 2 pcs wall plugs for screws
- 1 or 2 base plates (1 x LM 590, 591, 2 x LM 592)

Before installation, make sure there is about 13 cm of space above the bracket so that the bathroom shelf can be fitted (see section 5, figure 4).

1. Using the supplied screws, punch the holes in the back of the plastic bracket. (Figure 1)
2. Mark and drill 6 mm holes in the wall. The distance between the mounting holes is 80 mm. Insert the wall plugs into the holes.
3. Align the plastic bracket and screw it to the wall.
4. Remove the protective plastic from the base plate. (Figure 3)
5. Place the bathroom shelf in the bracket from above, as shown in Figure 4. The bathroom shelf can't be fitted as shown in Figure 5.



Figure 1



Figure 2

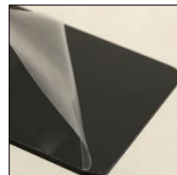


Figure 3

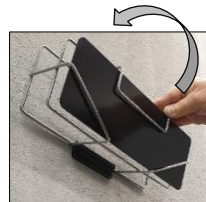


Figure 4

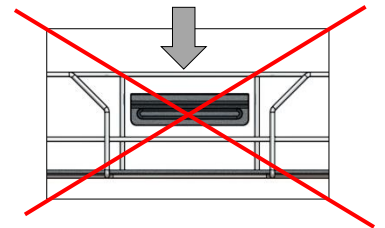


Figure 5

Tip! A screwless mounting kit [LM 599](#) is available as an accessory.

LM 590



LM 591



LM 592

