


# LM 690 SIIVI CLEANING EQUIPMENT TROLLEY - INSTALLATION INSTRUCTION



## Packing includes:


- 12 pcs of ball-headed screws 4,0 x 16 mm
- Frame (incl. elevation fillets integrated and ball bearing slides)
- Lower shelf
- Middle shelf
- Upper shelf

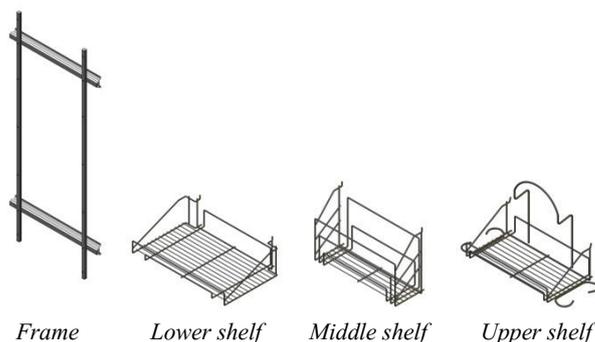

## Installation:

1. Choose the side of cabin, left or right, where you want to install the cleaning equipment trolley. The frame is symmetric, so by turning it upside down, it can be fixed to another side of the cabin. Before fixing, make sure that the frame glides to right direction, that is outside from the cabin.
2. Place the shelves into frame according to picture 1. The shelves are deliberately pretty tight to fit. Then fit the trolley in the cabin.
3. Mark the right fixing height and then remove the shelves from the frame.
4. Fit the frame into cabin and mark the right fixing depth (see picture 2).  
*Note! Make sure the length of the screws are suitable to the thickness of cabin side before fixing.*
5. Fix first the upper slide with few screws and after that the lower slide.
6. Pull out the frame from cabin, place the shelves and check the functionality of the system.
7. Fix the rest of the screws.

Picture 1 – placing the shelves

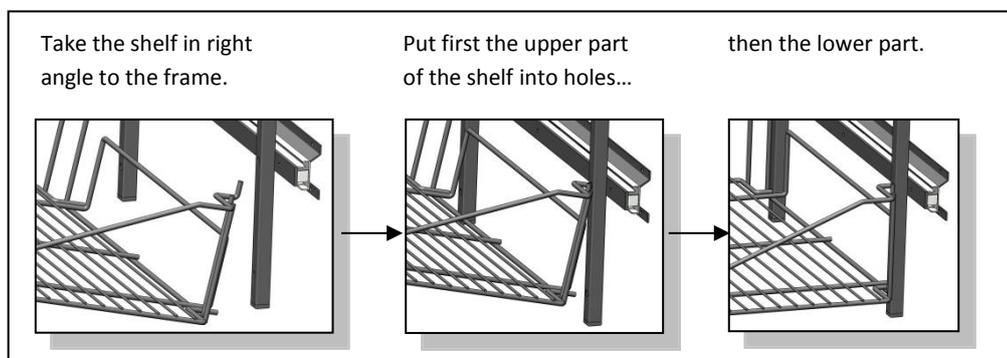

Picture 2 – fixing the frame

