



POSITIONING THE DRIP TRAY HOLDERS TO THE SHELF



LM 93 Drying/plate rack




LM 29 Drip tray holder



LM 28 Drip tray

1. Put the drip tray holder between the last wire space of the shelf by pushing the back part of the holder on a slant towards the cross wire.

Note! Place the support edge of the holder inwards (it is towards to the drip tray). Match the drip tray between the holder, if necessary, to check the right position of the holder.

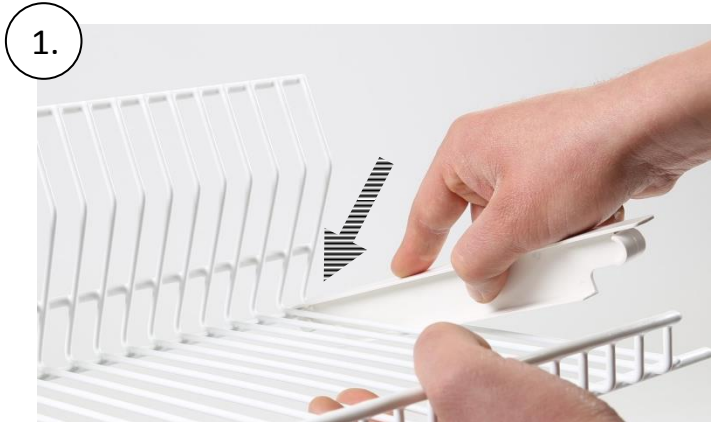

2. After the back part of the holder is securely towards the cross wire, push the front part firmly to its place.

Repeat pos. 1. – 2. with the other holder.



3. Slide the drip tray between the holders.

